

## Read instructions thoroughly BEFORE beginning

**Flashing light** is controlled by control box and blinks when the gate is moving. when the gates finishes the process of opening or closing the flashing light stops blinking.

### HOW TO INSTALL A FLASHING LIGHT

- 1)** Decide the installation position of the flashing light. The flashing light has to be installed near the gate and easy to be visible for user and passer-by. The flashing light should be installed vertically (Fig.1).
- 2)** Unscrew the two screws on the each side of light until separate the upper part from the lower part (Fig.2).
- 3)** Connect the wires and penetrate the wires into the hole of the base (Fig.3).
- 4)** Drill the holes in the wall and fix the bottom to the wall with two screws (Fig.4).
- 5)** Connect the wires of the light to the terminal on main board and place the wires into the conduit of necessary.
- 6)** Screw the two screws on the each side.



#### WARNING

To prevent possible **SERIOUS INJURY** or **DEATH**:  
Prevent water from penetrating into the flashing light.



# PERSIAN POWER

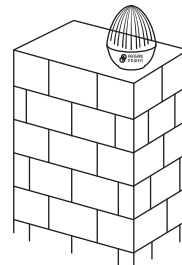


Figure 1

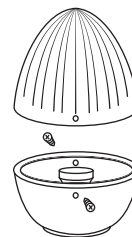


Figure 2

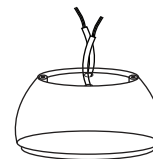


Figure 3

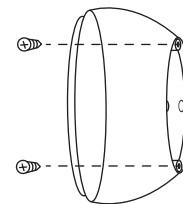


Figure 4